

**DATE:** 7/15/2015

**PRODUCT:** Neuralog 300x/NeuraLabel 300x printer

**TOPIC:** MAP Sense Calibration

**ISSUE OR PROBLEM:** Printer MAP Sense procedure needs to be run to address power usage

**SOLUTION:** Run MAP Sense procedure, only if directed by Neuralog/NeuraLabel support

### RESOLUTION/STEPS:

MAP Sense Calibration monitors the draw on the printer power supply to maintain safe power usage levels. Because the MAP Sense Calibration prints a cut sheet at the end of the procedure, make sure the continuous paper is removed from the printer and there is paper in the cut sheet tray 2.



- Make sure the printer is idle and that paper is loaded in the cut sheet tray
- Press **X**, **B**, **X**, **X** to access the *Engineering Menu* – This may take multiple attempts
- Scroll down to the *Service Menu*, press **OK**
- Press **B** once to see *System Configuration*, press **OK**
- Press **B** three times to see the *MAP Sense Calibration*, press **OK**
- Press **OK** to *Calibrate...?* Press **OK** again
- *Now Printing...* A page similar to the one shown below is printed when complete.



Contact Neuralog support at 1-281-240-2525 or support@neuralog.com or support@neuralabel.com