

PREPARE PRINTER FOR PACKAGING



www.Neuralog.com
support@Neuralog.com



Use only original Callisto packaging materials when boxing the printer.

Contact NeuraLabel if you do not have these materials.



Power down the printer using the round power button.



Turn the back power switch OFF. Unplug the network/power cables.



Remove the ink cartridges. DO NOT ship the printer with ink installed.

INSTALL PACKAGING MATERIALS



INK CAP: Place the orange ink cap in the ink cavity.



SLED CAPS: Install sled caps at the printer entrance.



Left Sled Cap

- Hold Left Cap so it is oriented in like an upper case D.
- Slide into place along the metallic grooves until it snaps into place.

Right Sled Cap


- Hold Right Cap so it is oriented with the arrow pointing to the left.
- Slide into place along metallic grooves to end of track. Then push up and to the right to snap into place.



BOX THE PRINTER



For extra security use packing tape to secure packing components

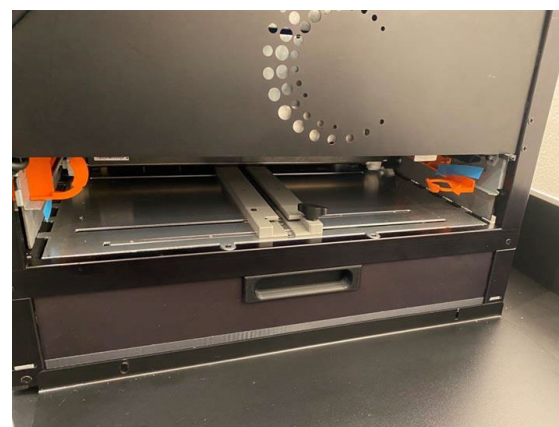

Prepare the lower box with lower foam and plastic bag. Lift printer with 2 people and place in the box.



Close the bag and place the upper foam over the printer.



Place the upper box component over the lower one. Attach the four white handles to keep the box in place.

Watch the
Repackaging Video



Neuralog



Printer Repackaging



You will Need

- 2-piece printer box
- Packing Foam
- Plastic Bag
- Orange Ink Cap
- Orange Sled Caps
- Packing Tape
- 4 white box handles

Neuralog